

BUTTER-IN-GEL


RICH BODY GEL
008(2).C14(2)



ISO 16128

BODY

GP2022INCOS

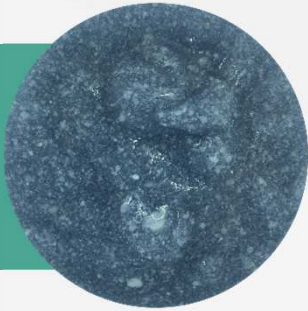

OVERVIEW

This innovative formula is really made of butter (Greensoft® 330 Cotton) in a transparent suspensive gel obtained thanks to Aristoflex® Velvet. This specific galenic allows the formulator to skip the usage of an emulsifier, and to get a fresh touch with a rich after feel. The chosen actives moisturize, sooth and strengthen the skin barrier function. SAFIC' Care Blue A Liquid gives its blue color to this formula.

Phase	Trade Name	Supplier	European I.N.C.I. Name	Function	%
A	Demineralized water	/	Aqua	/	63,25
	Glycerin		Glycerin	Humectant	3,00
B	Aristoflex® Velvet	CLARIANT*	Polyacrylate Crosspolymer-11	Thickener & suspensive agent	0,70
C	Preservative	/	Pentylene Glycol, Glycerin, Citrus Aurantium Amara Fruit Extract, Citrus Reticulata Fruit Extract, Citrus Aurantium Sinensis Peel Extract, Ascorbic Acid, Citric Acid, Lactic Acid	Preservative	1,00
D	MossCellTec™ Aloe	MIBELLE *	Xylitol, Caprylyl Glycol, Ketoglutaric Acid, Aqua	Active	2,00
	SAFIC' Care A Blue Liquid	SAFIC-ALCAN	Genipa Americana Fruit Extract, Glycerin	Color	0,05
E	Demineralized water	/	Aqua	/	20,00
	GreenSoft® 330 Cotton	GREENTECH*	Gossypium Herbaceum Seed Oil, Hydrogenated Olive Oil, Glyceryl Stearate, Tocopherol	Emollient	9,00
	EcoCeramides® LCS	IC BIO*	Butyrospermum Parkii Butter, Moringa Oleifera Seed Oil, Limnanthes Alba Seed Oil, Macadamia Integrifolia Seed Oil, Ceramide NP, Phytosphingosine, Glycerin, Hydrogenated Lecithin	Active	1,00

* Please contact us to know in which country we are supplier of

SAFIC' Care is a trademark of SAFIC-ALCAN

BUTTER-IN-GEL


RICH BODY GEL
008(2).C14(2)



ISO 16128

BODY

GP2022INCOS

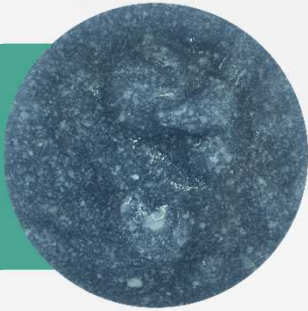

OVERVIEW

This innovative formula is really made of butter (Greensoft® 330 Cotton) in a transparent suspensive gel obtained thanks to Aristoflex® Velvet. This specific galenic allows the formulator to skip the usage of an emulsifier, and to get a fresh touch with a rich after feel. The chosen actives moisturize, sooth and strengthen the skin barrier function. SAFIC' Care Blue A Liquid gives its blue color to this formula.

PROCESS



PHASE A : Place under stirring.

PHASE B : Add to phase A and stir for 10 min until homogeneous.

PHASE C : Decrease the stirring speed then add it to phase AB.

PHASE D : Add to phase ABC and homogenize.

Adjust pH to 5,5-6,5 then put the gel in the fridge for 1 hour.

PHASE E : Place under slow stirring, heat up to 60°C until complete melting then stop heating.

Under slow stirring add quickly the cold gel then finish homogenizing manually.

PROPERTIES



APPEARANCE : Blue gel with little white melting particles.

VISCOSITY : 46 600 cPs
(Brookfield RVDV-I+, 5 rpm, spindle 6).

pH : 5,5 - 6,5.